


Air Compressor Troubleshooting Guide




Issue:

The compressor is plugged into the 12v socket but still isn't working

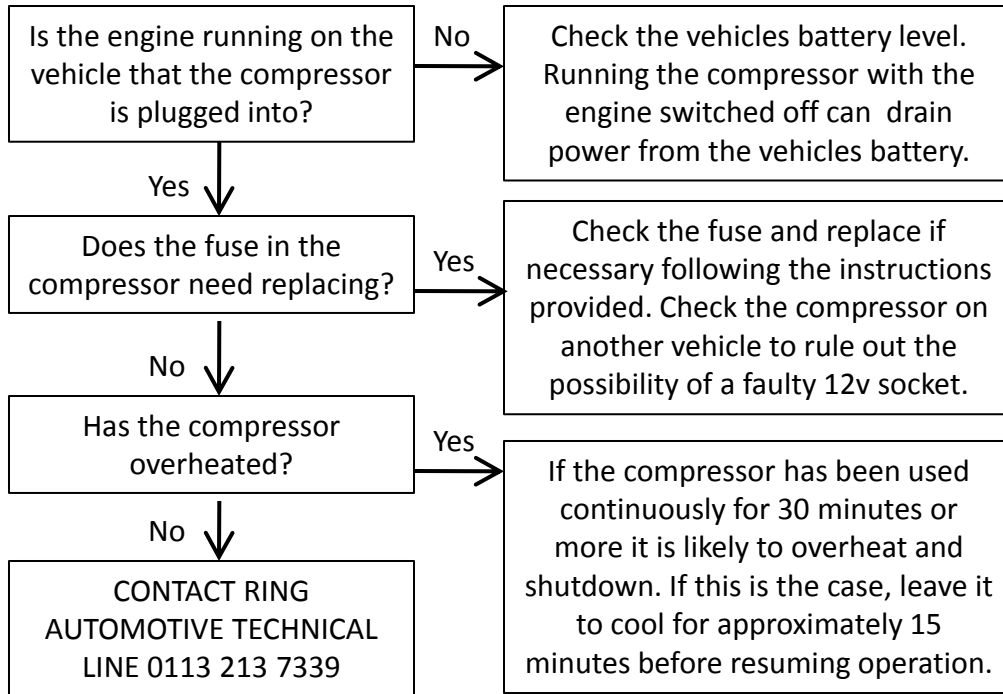


Issue: The compressor isn't pressurising correctly

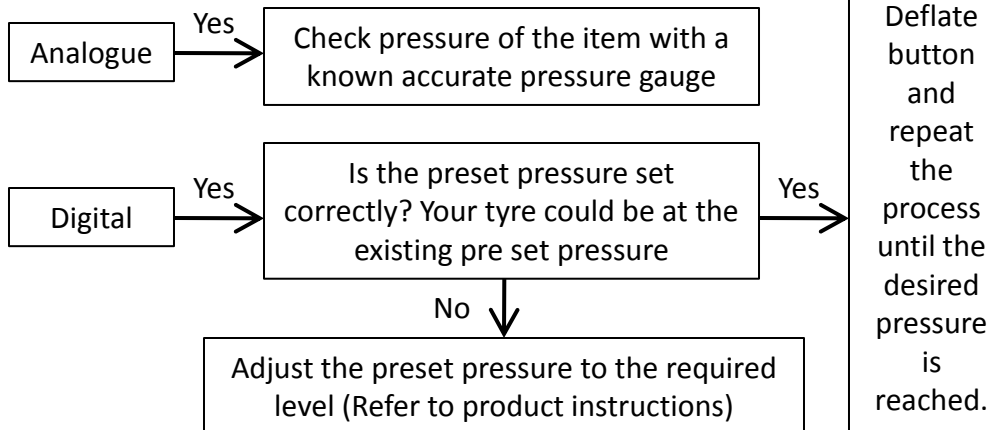

Issue:

The compressor doesn't operate correctly

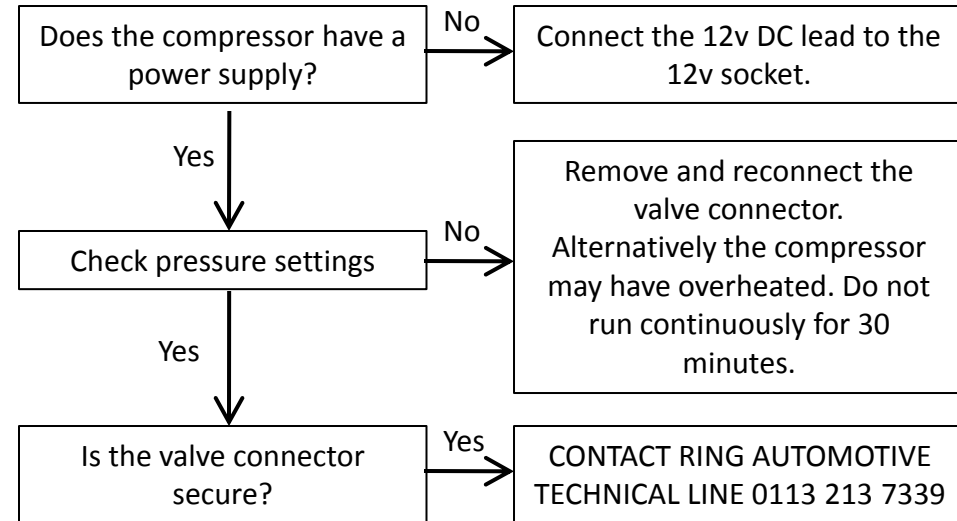

Issue: The compressor will not recharge

